

**BMW Coding is available for the following models :**

Both the E Chasis and F Chasis are supported

**BMW 1-series : E81, E82, E87, E88, F20, F21, F44, F45, F46**  
**BMW 2-series : F22, F23**  
**BMW 3-series : E46, E90, E91, E92, E93, F30, F31, F34, F35, F80**  
**BMW 4-series : F32, F33, F35, F36, F82, F83**  
**BMW 5-series : E39, E60, E61, F07, F10, F11, F18**  
**BMW 6-series: E63, E64, F06, F12, F13**  
**BMW 7-series : E65, E66, F01, F02, F03, F04**  
**BMW X-series : E53, E70, E71, E72, E83, F25, F15, F16, F25, F26, F48**  
**BMW Z-series : E52, E85, E86**  
**BMW i3 : I01**  
**BMW i8 : I12**

Here is a list of the **BMW Coding and Programming** that can be done (list is not limited to) :

<b>BMW Coding Function</b>	<b>Coding Description</b>
Enable the parked car ventilation option	Enables the parked car ventilation option. Tested on non-idrive professional HU. Gives you 2 programmable timers to set when you would like the cabin fan to switch on.
Seat Belt Chime	Disables seat belt chime for passenger side
Disable Seat Belt Reminder in iDrive (CIC)	Disable Seat Belt Reminder in iDrive.
Seat Belt Chime	Disables seat belt chime for passenger side
Auto Light Sensitivity Control in Idrive	Allows you to control the auto light/rain sensor in idrive.
Disable iDrive Disclaimer	Disables iDrive legal disclaimer during iDrive startup. This is for the earlier E90 with CCC module.
DRL option in iDrive	Adds a submenu with DRL option (On,Off) in iDrive settings.
Enable TV / Video viewing whilst Driving	Prevents blocking picture message to appear in iDrive and enables you to watch TV/Video whilst driving. (TV module is an option in some countries)
iDrive Default Screen Communication	iDrive screen switches to Communication few seconds after startup.
iDrive Default Screen Entertainment	iDrive screen switches to Entertainment a few seconds after startup.
iDrive Default Screen Navigation	iDrive screen switches to Navigation a few seconds after startup.
Lock/unlock beep option in iDrive (part 1)	Adds a submenu for lock/unlock beep in iDrive Settings (must have alarm installed)
Lock/unlock beep option in iDrive (part 2)	Adds a submenu for lock/unlock beep in iDrive Settings (must have alarm installed)
Lock/unlock beep option in iDrive (part 3)	
Lock/unlock beep option in iDrive (part 4)	
Weather Radio Band	Adds Weather Band to radio.
Auto Light Sensitivity Control in Idrive (Multiple Changes required, see Description)	Allows you to control the auto light/rain sensor in idrive.
Disable iDrive Disclaimer	Disables iDrive legal disclaimer during iDrive startup. This is for the earlier E90 with CCC module.
DRL option in iDrive	Adds a submenu with DRL option (On,Off) in iDrive settings.
Video in Motion (CCC)	
Auto Dimming Mirrors	To turn off autodim mirror
Close Windows/Roof with Fob	Closes windows + moon roof through Key Fob

Close Windows/Roof with CA	Closes windows + moon roof through comfort access
Engine Start without brake	Start engine without pressing the brake (Does not work on 2010)
Key Fob Ejected from Socket upon Engine Stop	When turning the engine off key fob will be ejected from socket. (Need to hold start/stop for extra 2 seconds)
Panic Mode	Enables panic alarm. Must have alarm installed. Hold trunk button on FOB for 5 secs to activate.
Unlock Doors	Unlocks all doors when you remove key.
Disable Keyhole Alarm	Set the key in the door to not disarm the alarm system, only remote will disarm alarm system.
Disable Auto Dim Mirrors	
Disable iDrive Disclaimer	Disables iDrive legal disclaimer during iDrive startup.
DRL option in iDrive	Adds a submenu with DRL option (On,Off) in iDrive settings.
DVD Playback	Enables DVD playback when car is stopped regardless of what gear but not in motion.
DVD-In Motion	
Fuel Stop Suggestion in Route Guidance	Go to "Route Information" on iDrive when you're going somewhere and it will tell you at what point(s) along your journey you'll likely need to fill up. You can then select that notice and it will tell you about the stations in the area at that point on your trip.
iDrive Display Modes	Adds a submenu with 3 options under Day Mode (day, night, auto) (**DOES NOT WORK ON E90 2010/11 or E92 2009/10)
Restore DSC Off option in MDRIVE menu	If set, will re-enable the ability to completely disable DSC in mdrive menu.
Weather Radio Band	Adds NOAA Weather Radio band.
Alarm beep on unlock	Alarm beep on unlock (two beeps) (must have alarm installed)
Sound alarm chirp level	Alarm chirp sound .
Mirrors w/ FOB	Fold side mirrors with FOB (CA also works 2009/01 E92). Mirrors folded with the button inside the car cannot be unfolded via the FOB.
Adaptive Headlight Error	Removes the adaptive headlight error check
Adaptive Headlight Error	Removes the adaptive headlight error check
All High Beams	Have both the bixenons and the halogen as high beams
Angel Eyes Error: need to code all the following	Removes/disables angel eye / parking light errors
Angel Eyes on when unlocking the car	Angel Eyes on when Welcome Light activated. Tested only on e92.
BFD with Regular Brake Light	Now you will have both brake lights glowing ( Standard Brakelight with Brake Force Light )
Bulb Testing Warning	Cold testing bulbs in low beam –
Bulb Testing Warning	Cold testing bulbs in turn signal rear –
Bulb Testing Warning	Cold testing bulbs in turn signal –
Bulb Testing Warning	Cold testing bulbs in high beam –
Bulb Testing Warning	Cold testing bulbs in number plate –
Bulb Testing Warning	
Bulb Testing Warning	Cold testing bulbs in foglights –
Bulb Testing Warning	Cold testing bulbs in reversing light –
Bulb Testing Warning	Warm testing bulbs in low beams –
Bulb Testing Warning	Warm testing bulbs in low beams –
Bulb Testing Warning	Warm testing bulbs in brakes –
Bulb Testing Warning	Warm testing bulbs in rear turn signals –
Bulb Testing Warning	Warm testing bulbs in front turn signals –

Bulb Testing Warning	Warm testing bulbs in high beams –
Bulb Testing Warning	Warm testing bulbs in number plate light bulb –
Corner Delete Mod	Disables side marker/signal light when headlights are on.
Corner LED Delete Mod	
Corner LED Delete Mod	Disables corner LED light when headlights are on.
Corner LED Delete Mod	Disables corner LED light; 2008,9 E92 -Applies to parking lights (when u turn lights one click to the right from off position)
Corner LED Delete Mod E92	Disables corner LED light; 2008 E92 –
Corner LED Delete Mod E92	Disables corner LED light; 2008 E92 –
Corner LED Delete Mod E92	Disables corner LED light when headlights are on.
Corner LED Delete Mod E92	Disables corner LED light when headlights are on.
Corner LED Delete Mod E92	Disables corner LED light when you unlock the car.
Corner LED on when unlocking the car	Corner LED lights on when you unlock the car.
Disable windows safety feature	Opening doors will not interrupt window roll up operation. Normally, if you open a door while the window is automatically rolling up, it will stop the operation. This feature disables it.
Disable windows safety feature	Opening doors will not interrupt window roll up operation. Normally, if you open a door while the window is automatically rolling up, it will stop the operation. This feature disables it.
Double Blink Hazards in crash	Hazard lights will double blink instead of single blink after a crash
Double Blink Hazards when button is pressed	Hazard lights will double blink instead of single blink.
DRL High Beam	Disables the Daytime Running Lights (High Beam) Canadian models.
DRL Taillight Delete	Disables taillights when DRL is on.
DRL Taillight Delete	Disables taillights when DRL is on.
DRL Taillight Delete	Disables taillights when DRL is on.
DRL_TFL_MIT	Disables the Daytime Running Lights (DRL) on Canadian models.
Enable DRL	Enable DRL function on pre-lci after 04/2007,
Enable DRL (AE or High Beam)	
Fog Lights + Flash	Allows fog lights to stay on when the high beams are flashed.
Fold/unfold mirrors with fob	Folds side mirrors with FOB and CA. Requires that closing windows/moonroof with fob also be enabled
Front fog lights on when unlocking the car	Front fog lights on when Welcome Light activated.
Front Parking lights on when unlocking the car	Front Parking lights on when Welcome Light activated. Tested only on e92.
Front turn signals on when unlocking the car	Front turn signals on when Welcome Light activated.
High beams on when unlocking the car	High beams turn on when Welcome Light activated.
LED Tail Light Retrofit	
LED Tail Light Retrofit	
Length of time that Welcome Lights Stay on	
Low beams on when unlocking the car	Low beams turn on when Welcome Light activated.
Rear fog lights on when unlocking the car	Rear fog lights on when Welcome Light activated.
Rear license plate on when unlocking the car	Rear license plate lights on when Welcome Light activated.
Rear turn signals on when unlocking the car	Rear turn signals on when Welcome Light activated.

Right Parking lamp malfunction error message	remove the warning from your BMW idrive when you install HID's or angel eyes
Side Marker Delete	Disables side marker/signal light when headlights are on.
welcome light on when unlocking the car	WL=welcome light, RL=rear light
Auto Dimming Mirrors	
Bulb Testing Warning	Cold testing bulbs in turn signal front –
Bulb Testing Warning	Warm testing bulbs in number plate light bulb –
Enable DRL on Halogen	
Corner Activate on French E87	
All High Beams	
Angel Eyes Error: need to code all the following	Removes/disables angel eye / parking light errors
Angel Eyes on when unlocking the car	Angel Eyes on when Welcome Light activated. Tested only on e92.
BFD with Regular Brake Light	Now you will have both brake lights glowing ( Standart Brakelight with Brake Force Light )
Bulb Testing Warning	Cold testing bulbs in low beam –
Bulb Testing Warning	Cold testing bulbs in brake light –
Bulb Testing Warning	Cold testing bulbs in turn signal rear –
Bulb Testing Warning	Cold testing bulbs in turn signal –
Bulb Testing Warning	Cold testing bulbs in high beam –
Bulb Testing Warning	Cold testing bulbs in number plate –
Bulb Testing Warning	
Bulb Testing Warning	Cold testing bulbs in foglights –
Bulb Testing Warning	Cold testing bulbs in reversing light –
Bulb Testing Warning	Warm testing bulbs in low beams –
Bulb Testing Warning	Warm testing bulbs in low beams –
Bulb Testing Warning	Warm testing bulbs in brakes –
Bulb Testing Warning	Warm testing bulbs in rear turn signals –
Bulb Testing Warning	Warm testing bulbs in front turn signals –
Bulb Testing Warning	Warm testing bulbs in high beams –
Bulb Testing Warning	Warm testing bulbs in number plate light bulb –
DRL Taillight Delete	Disables taillights when DRL is on.
Enable DRL	Enable DRL function on pre-lci after 04/2007,
Enable DRL (AE or High Beam)	
Fog Lights + High Beam	Allows fog lights to stay on when the high beams are on.
Front corner LED lights on when unlocking the car	Front corner LED light on when Welcome Light activated.
Front fog lights on when unlocking the car	Front fog lights on when Welcome Light activated.
Front Parking lights on when unlocking the car	Front Parking lights on when Welcome Light activated.
Front turn signals on when unlocking the car	Front turn signals on when Welcome Light activated.
LED Tail Light Retrofit	
LED Tail Light Retrofit	
Right Parking lamp malfunction error message	remove the warning from your BMW idrive when you install HID's or angel eyes
Side Marker Delete	Disables side marker/signal light when headlights are on.
Side Marker Delete	Disables corner LED light when headlights are on.

Side Marker Delete	Disables corner LED light when headlights (low beam) are on
Side Marker Delete	Disables corner LED light when headlights (high beam) are on.
Side Marker Delete	Disables side marker/signal light when headlights are on.
Side Marker Delete	
Side Marker Delete E92	Disables corner LED light; 2008 E92 –
Side Marker Delete E92	Disables corner LED light; 2008 E92 –
Side Marker Delete E92	Disables corner LED light; 2008 E92
Side Marker Delete E92	Disables corner LED light when headlights are on.
Side Marker Delete E92	Disables side marker/signal light when headlights are on.
Side Marker Delete E92	Front corner LED light on when Welcome Light activated.
Increase Angel Eyes Brightness	Increase Angel Eyes Brightness on NFRM3.C31.
Follow Me Home Lights	Turns on low beams, and rear lights when the trunk button is pressed on FOB once.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Engine Auto Start/Stop last state startup	Auto Start/Stop function to start the last used setting when the engine is started.
REST feature enable on cars with an ALL button	Toggle between ALL and REST feature. The REST fully works as in the 2007-2010 cars
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Climate don't turn ON in Auto mode	A/C will not automatically turn on when Auto is pressed.
Central Locking with Key Only	Central Locking Button unlocks without keys in ignition
Headlight Washers Disabled	Turn off the headlight washer
Wiper wipes to End position after turning engine off	When Wiper is Wiping, and you turn engine off, it will now keep on going.
Central Locking with Key Only	Central Locking Button unlocks without keys in ignition
Auto Headlight Sensitivity adjustment from BC Button	
Digital Speed	Displays digital speed in cluster
Display cruise control set speed	
Door Dong	Disables dong when driver's door is open and key is in slot.
Driver seat memory options in cluster	Enable driver seat memory options in cluster when retrofitting powered seats
Enable Suggestion in 6MT	
Instant MPG	Displays digital instant-read MPG in cluster
Instrument Cluster Lighting Always On	Will keep your instrument cluster backlight on all the time, regardless if your headlights are on or not.
Fuel Tank Reserve Warning	
Digital Speed Value	Digital speed will give true car speed (not speedometer speed).
Display cruise control set speed	
Fog Lights + High Beam	Allows fog lights to stay on when the high beams are flashed.
Change incoming call ring tone	Change the incoming ring tone of MULF2.
Enable Bluetooth & management from	Enable Bluetooth management from RAD2

Professional Radio	
Enable CDC management from Professional Radio	Enable CDC management from RAD2.
Enable SMS management from Professional Radio	Enable SMS management from RAD2.
Enable USB management from Professional Radio	Enable USB management from RAD2.
Enable Phone Volume in AUX	Set value from aux to aux_and_telmin to activate the Phone function
Rain Close from full open	Auto wipers have be on for this to work. Once it closes, you wont be able to re-open sunroof until car power down for about 10 minutes. spaz
Rain Close Sunroof from Tilt	
TPMS Disable	
Bulb Testing Warning	Cold testing bulbs in brake light –
Display and Gong when Key in ignition	beep & display when door opened to warn key left in Ignition